


NC 125/160/200 TC / LC

"Snapping rotates by itself"

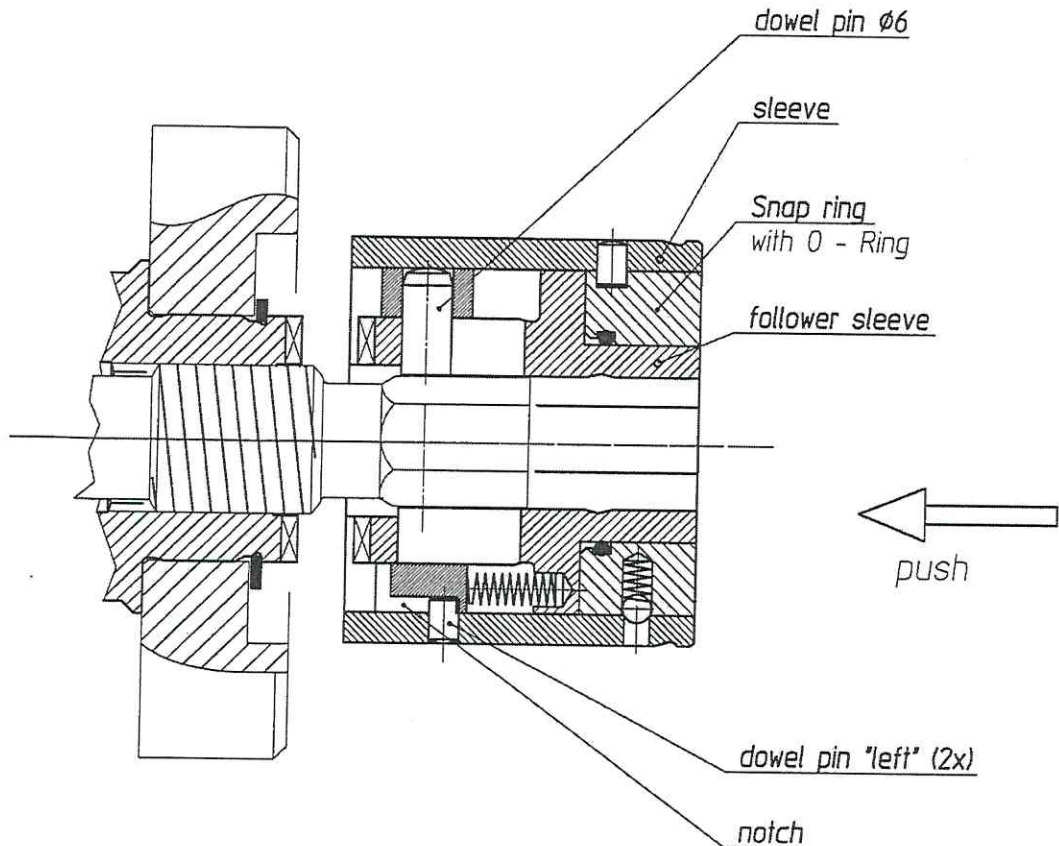

Dismantling:

1. Remove guide plate
2. Turn snap ring to position 4
3. Push the sleeve (complete) axial, as far as possible, in the direction of the arrow
4. With the sleeve pushed back, strike the dowel pin "left" (2x180°) towards the inside
5. Take off the sleeve (complete)
6. Push out the dowel pin $\varnothing 6$
7. Clean the hexagon bolt and surrounding parts, cover with fresh grease
8. Assembly in reverse order
9. Hammer the dowel pins "links" into the holes, (flush with the outside diameter)
take care that the notch is correctly positioned